




# ZENO™

## Quick Start Guide

- 1 Make sure battery is fully charged
- 2 Clean tip
- 3 Press 
- 4 Press  when flashing green
- 5 Place on pimple
- 6 Listen for Treatment Pacer tone every 30 seconds
- 7 Remove after Treatment Complete tone (2½ minutes,  turns amber)

*For additional pimples, repeat steps 4 through 7*

*If needed, re-treat again after 4 to 12 hours*

### Tip Life

- ● ● ● 68 to 90 treatments
- ● ● ○ 46 to 67 treatments
- ● ○ ○ 23 to 45 treatments
- ○ ○ ○ less than 23 treatments
- ☀ ○ ○ ○ 5 or fewer treatments
- ☀ ☀ ☀ ☀ Replace

### Battery Life

- Adequate to full
- ☀ Recharge soon
- Must recharge

See warnings on reverse

## **Read Product Manual**

**To reduce the risk of electrocution or product damage, keep Zeno and the Wall Charging Plug away from water.**

DO NOT place Zeno or the Wall Charger where it may fall/be pulled into water or around heated surfaces.

DO NOT use Zeno if the Treatment Activation Button is illuminated amber.

DO NOT use Zeno until the Treatment Activation Button flashes green.

DO NOT reach for Zeno if it is plugged into an outlet and falls into water. Unplug before retrieving from water.

DO NOT use Zeno when bathing, standing in water, or on and around the eyes and lips.

DO NOT force the Wall Charger Plug into an outlet or operate if its cord/plug is damaged, or if it is not working properly.

DO supervise children while they use Zeno.

DO use Zeno only for the purposes described in the Product Manual and only use Zeno Replacement Tip Cartridges.

Should you experience any discomfort when using Zeno, discontinue use and consult your skin care professional.

**Failure to comply with all warnings could result in a serious injury or fatal electrical shock.**